 


CHARGING STATION

- 2.0 Select a place near outlet socket and without any obstacles.
 - 3.0 Set Charging Station to wall.
 - 3.1 Rotate the screw outside to fit the gap between wall and Charging Station (See FIG.02)
 - 3.2 Remove the protecting paper on Sponge.
 - 3.3 Set it to the wall (See FIG.03).
- Caution:** Sponge may cause sticky marks to the wall or wood surfaces after removal. Please cut the sponge into small pieces to minimize the damage.

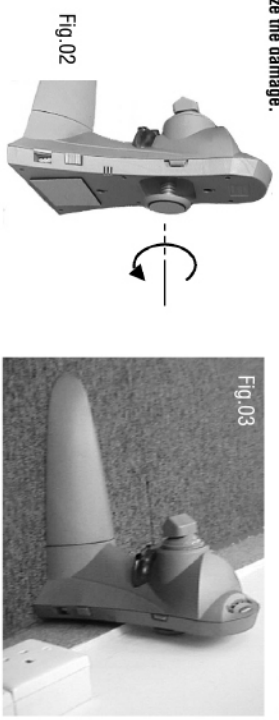

HOW TO USE:
1.0 Preparation
1.1 Connect Charging Station to I-Cybie's Charger. (See Fig.04-1 & Fig.04-2).



1.2 Set the ON/OFF switch to ON. The green LED will light up. The Charging Station is now in Standby mode.
1.3 Disconnect I-Cybie's battery, then put Cartridge with code in the slot on I-Cybie™ (See Fig.05).

- Cautions:**
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with correct polarity.
 - The supply terminals are not to be short-circuited.

Note:

- Parental guidance is recommended when installing or replacing batteries.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the manufacturer's instructions while operating the product.


- Care and Maintenance:**
- Always remove adaptor from the Charging Station when it is not being used for a long period of time.
 - Wipe the Charging Station gently with a clean damp cloth.
 - Keep the Charging Station away from direct sunlight and/or direct heat.
 - Do not submerge the Charging Station into water that can damage the electronic assemblies.

Power Supply:
Battery requirement for Charging Station
Power Supply : 15VDC ,300mA
Input : 14.4VDC ,200mA
Output :


Content:

Charging Station:	1 pc	CARTRIDGE with Code:	1 pc
Dock:	1 pc	Manual:	1 pc

 Charging Station is a device specially designed for I-Cybie™. It can communicate with I-Cybie™ while the battery inside I-Cybie™ is exhausted. I-Cybie™ can go for charging battery himself. It has the features of:
AUTO Charging
MANUAL Charging
DEMO Charging
Short Circuit Protection
Low Battery Voltage Adjustment with Remote Control

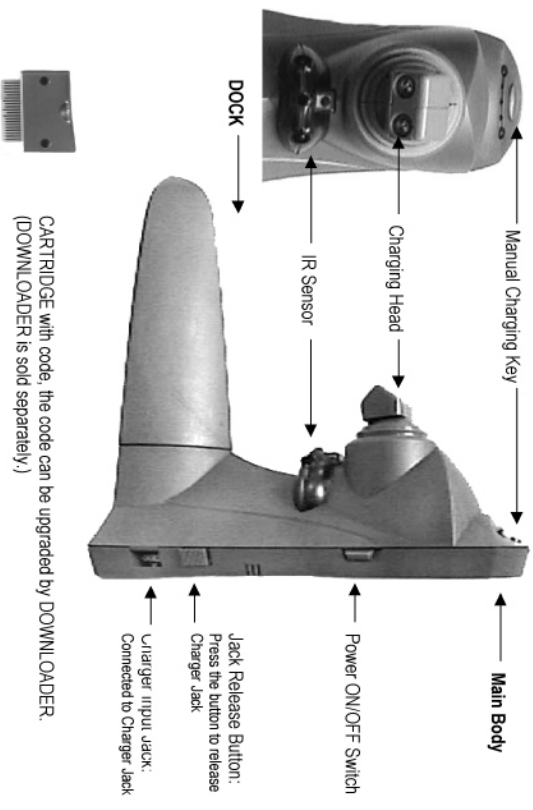

 CHARGING STATION INSTALLATION:
1.0 Connect dock with main body as per FIG.01-1, FIG.01-2 & FIG.01-3.

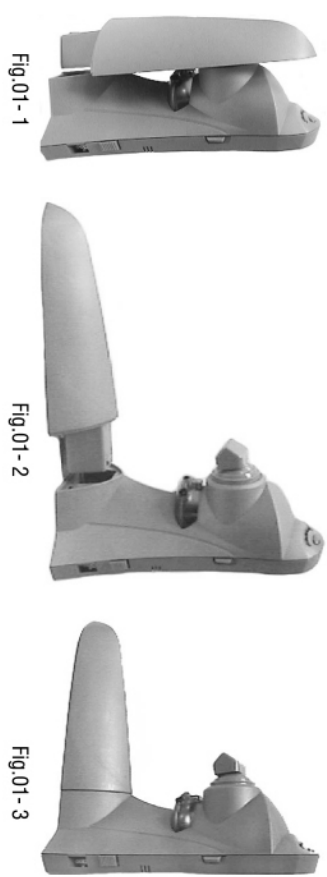

7.0 Tips for Operation

- 7.1 Please see section 8.0 for the correct use of the Station
- 7.2 Press "Manual Charging" Key. The Station will generate a leaving signal and blink his eyes and return to normal operation
- 7.3 If disconnect for a while at the end of the charging period, the Station will generate a leaving signal and blink his eyes and return to normal operation
- 7.4 Charging period will depend on the battery capacity
- 7.5 A mood of I-Cyble™ will effect the charging period
- 7.6 You can decrease the "Low Voltage" level by pressing the "Low Voltage" key
- 7.7 Do not block the holes on the front of the Station
- 7.8 If the battery voltage is very low, the Station will generate a leaving signal and charge it directly to I-Cyble™ mood
- 7.9 The effective area:
 - Range : About 1.5 Meter
 - Angle : ±50 degrees from normal

8.0 LED Pattern

8.1 I-Cyble™

8.2 Charging Station