

This attachment guide is created for use by groups.yahoo.com/group/i-cybie members only, please be considerate of the efforts made here, and don't post or distribute without permission. Thank you! :) -Z-




CUT AND REMOVE THESE SECTIONS

UPPER SCREW GUIDE

ADJUSTABLE WALL STABILIZER

LOWER SCREW GUIDE

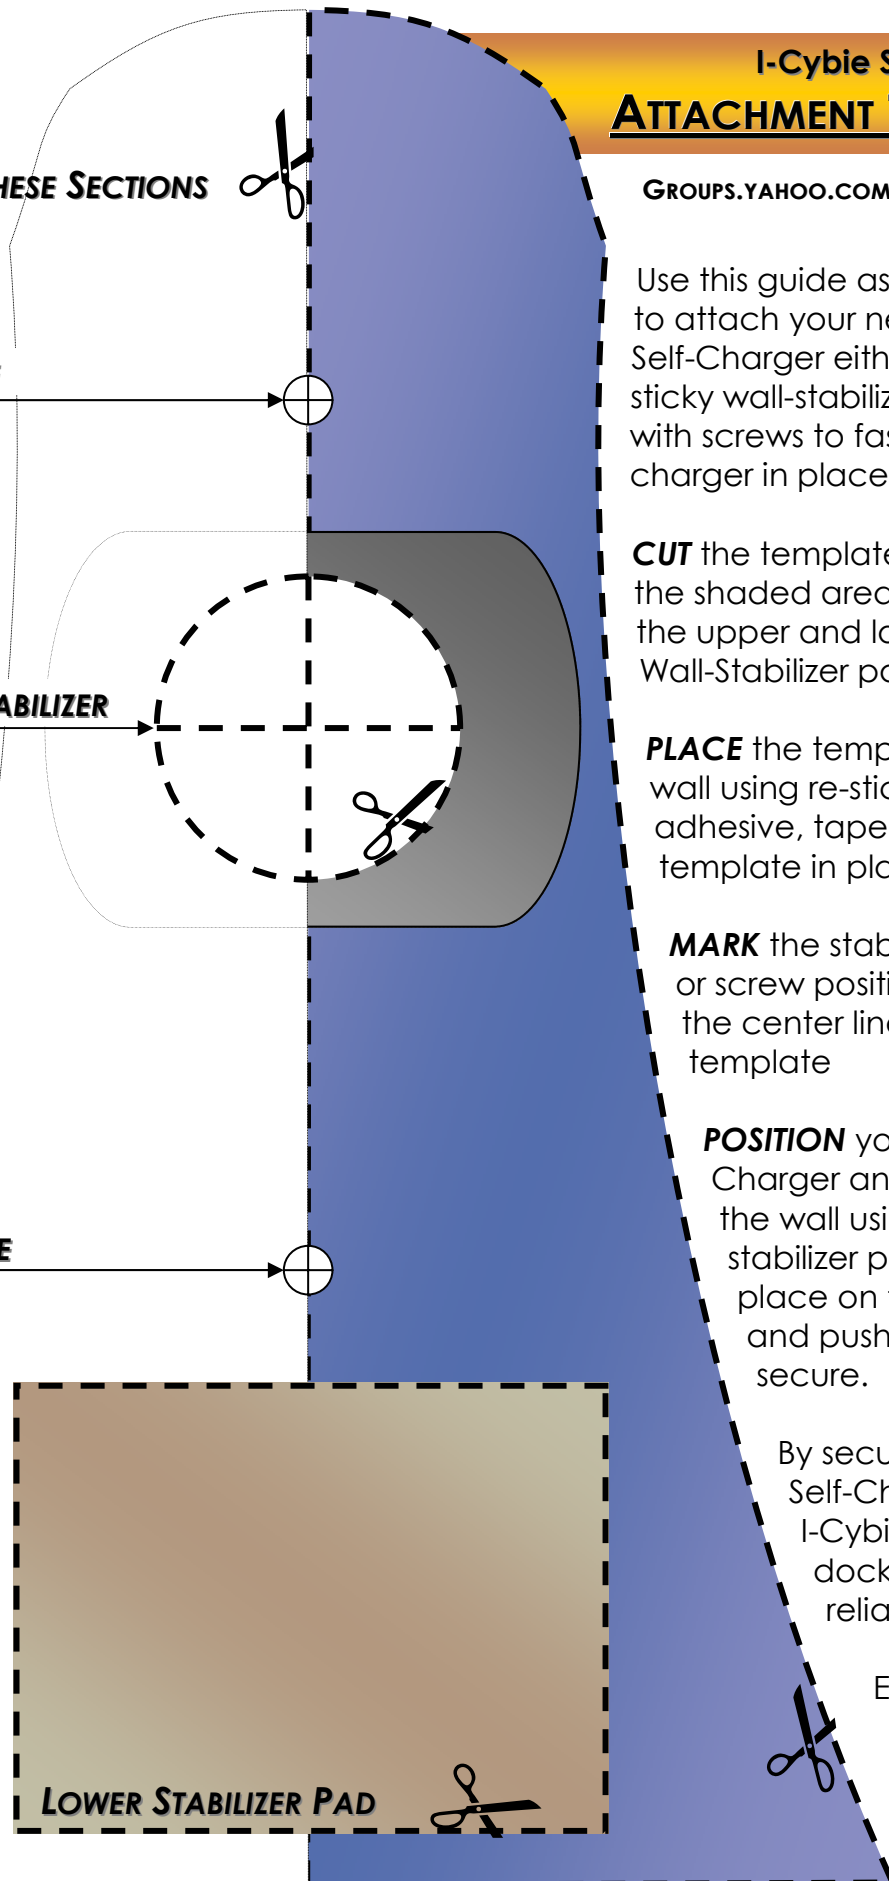

I-Cybie Self-Charger ATTACHMENT TEMPLATE

GROUPS.YAHOO.COM/GROUP/I-CYBIE

Use this guide as a template to attach your new Walk-Up Self-Charger either using the sticky wall-stabilizing pads, or with screws to fasten the charger in place.

CUT the template out, along the shaded area, removing the upper and lower sticky Wall-Stabilizer pad sections.

PLACE the template on the wall using re-stickable adhesive, tape, or hold the template in place.

MARK the stabilizer pads, or screw positions, and the center line of the template

POSITION your Self-Charger and attach to the wall using the stabilizer pads, or place on the screws and push down to secure.

By securing the Self-Charger, your I-Cybie will now dock more reliably!

Enjoy! :) -Z-